

Vertical Blind Installation Guide – Inside Fit option

Parts

1. Installation bracket
2. Installation Screw (1 per bracket, Square head)

Bracket positioning

The amount of brackets supplied are relative to the width of the blind.

The brackets should be spaced out evenly across the width of the window with one bracket being fixed close to the control wand.

Hold your blind in the window where it will be installed and mark on the window frame where the brackets should be positioned.

The bracket will always be positioned as in Figure 1



Figure 1

Step 1

Face mounting

Hold the bracket against the face of the window frame with the top edge of the bracket aligned with the upper position you have measured from.

Screw through the front of the bracket into the face of the window frame as in Figure 3



Figure 3

Make sure all brackets are level and evenly spaced across the face of the window.



Step 2

Installing the blind

Hold the blind at the window face and push the front of the headrail into the front of the bracket

Then push the back of the headrail up and into the back of the bracket

There should be a positive click when the blind is correctly secured in the bracket



Step 3

Fitting Vertical fabric

Using the wand control attached to the headrail move all the clear plastic carriages to the end of the blind where they will be stacked (Closest together)

You will be supplied a package of vertical fabric that has all the vertical fabric blades rolled up in it.

Each vertical blade has a plastic hanger in the top of it.

Starting at one end clip each vertical fabric blade into the carriages inside the headrail, being careful not to miss any.

Unroll the fabric and let the fabric blades hang.

Removing the Blind

Note: If you want to take the blind down it would be useful to remove the fabric blades from the carriage first so the fabric does not get damaged.

To remove the blind, simply push the tab of the bracket at the back of the headrail upward and this will release the bracket.

Once the back of the bracket is released tilt the blind downward and away from the window and lift out of the bracket.

Vertical Blind Installation Guide – Face Fit option

Parts

Face Fit

1. Installation bracket
2. Installation Screw (1 per bracket, Square head)

Bracket positioning

The amount of brackets supplied are relative to the width of the blind.

The brackets should be spaced out evenly across the width of the window with one bracket being fixed close to the control wand.

Hold your blind in the window where it will be installed and mark on the window frame where the brackets should be positioned.

The bracket will always be positioned as in Figure 1

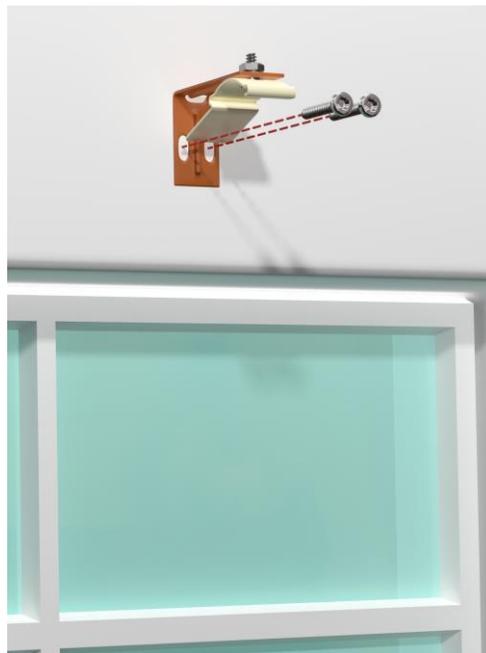


Figure 1

Step 1

Face mounting

Hold the bracket against the face of the window frame with the top edge of the bracket aligned with the upper position you have measured from.

Screw through the front of the bracket into the face of the window frame as in Figure 3



Figure 3

Make sure all brackets are level and evenly spaced across the face of the window.



Step 2

Installing the blind

Hold the blind at the window face and push the front of the headrail into the front of the bracket

Then push the back of the headrail up and into the back of the bracket

There should be a positive click when the blind is correctly secured in the bracket



Step 3

Fitting Vertical fabric

Using the wand control attached to the headrail move all the clear plastic carriages to the end of the blind where they will be stacked (Closest together)

You will be supplied a package of vertical fabric that has all the vertical fabric blades rolled up in it.

Each vertical blade has a plastic hanger in the top of it.

Starting at one end clip each vertical fabric blade into the carriages inside the headrail, being careful not to miss any.

Unroll the fabric and let the fabric blades hang.

Removing the Blind

Note: If you want to take the blind down it would be useful to remove the fabric blades from the carriage first so the fabric does not get damaged.

To remove the blind, simply push the tab of the bracket at the back of the headrail upward and this will release the bracket.

Once the back of the bracket is released tilt the blind downward and away from the window and lift out of the bracket.