the **BlindStore**

Roller Blind Installation Guide - Inside Fit option

Parts

- 1. Installation bracket (Same bracket used for inside and face fitting)
- 2. Installation Screw (2 per bracket, Square head)

Inside fit option

Step 1

Bracket positioning

You will be provided with 2 installation brackets

- 1. Chain end bracket
- 2. Pin end bracket



Pin end Bracket

Chain end Bracket

Determine where in the window frame the blind is going to be installed. You will see that the brackets supplied are narrower than the component on either end of the blind.

It is important that when you position the brackets on the window frame you allow at least 10mm from any surface on the window frame so that the Chain and pin end on either end of the blind are not obstructed and will fit in the brackets correctly.




Step 2

Firstly turn the plastic disc on the pin end to retract the pin (this will prevent the pin scratching the pain on the window sill as you lift the blind into position)



Lift the blind up inserting the chain end on to the tongue projecting out from the brackets making sure it sit in the slot at the end of the Chain end component.

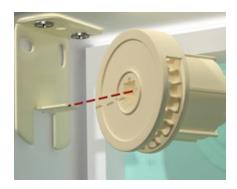

Once the chain end is located correctly, move the Pin end, turn the clear disc the opposite way to extend the pin and locate it in the hole in the bracket.



Step 3

Once the blind is in position test the blind to make sure that it rolls up and down correctly by pulling on the chain.



Roller Blind Installation Guide - Face Fit option

Parts


- 1. Installation bracket (Same bracket used for inside and face fitting)
- 2. Installation Screw (2 per bracket, Square head)

Step 1


Bracket positioning

You will be provided with 2 installation brackets

- 1. Chain end bracket
- 2. Pin end bracket

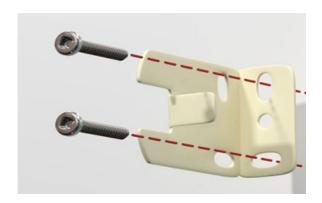

Chain end Bracket

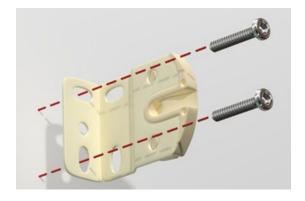

Pin end Bracket

Determine where on the face of the window frame the blind is going to be installed.

Install the brackets in the position you have measured from.

It is safer to install the chain end bracket first and either measure across to ensure that the other bracket is in the correct position.



Step 2

Firstly turn the plastic disc on the pin end to retract the pin (this will prevent the pin scratching the pain on the window sill as you lift the blind into position)



Lift the blind up inserting the chain end on to the tongue projecting out from the brackets making sure it sit in the slot at the end of the Chain end component.

Once the chain end is located correctly, move the Pin end, turn the clear disc the opposite way to extend the pin and locate it in the hole in the bracket.



Step 3

Once the blind is in position, test the blind to make sure that it rolls up and down correctly by pulling on the chain.



Roller Blind Installation Guide — Removing blind from Brackets

If you need to remove the roller blind from the installation brackets for cleaning or maintenance this is very easy to do.


Step 1

Position yourself at the opposite end to where the chain control is, this is where the pin end of the blind is located. Make sure the blind is rolled up.



Step 2

Whilst supporting the blind turn the clear plastic disc either clockwise or anti clockwise, this will retract the metal bin that is holding the blind in the installation bracket. You will hear a click noise this means the pin is fully retracted and this end of the blind will be free from the installation bracket.

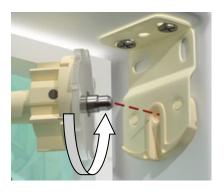

Step 3

Lower this end down about 100mm and pull the whole blind toward the end you are standing at to release it from the control end bracket. Once you have done this the blind will be free from the installation brackets and can be lowered to the ground.

Note: If you lower it to far at the pin end before you have released it from the control end bracket you will find there will be some resistance, if this is the case lift the end you are at slightly until the resistance decreases and pull the blind toward you.

